

# CARVANA HAS YOU COVERED

Whether you are a first time buyer, a repair wizard, or on a strict budget, we’ve got you covered.



10,000+  
In-network Locations



Rental  
Coverage



24/7 Roadside  
Assistance



Cancel  
Anytime

All plans include a \$100 deductible at in-network repair locations and \$350 at out-of-network locations.

## Affordable options for everyone



### Basic Mechanical Coverage

CarvanaCare Essential is our basic level of protection, covering the components that move the vehicle such as the engine, transmission, and drivetrain.



### Comprehensive Coverage

CarvanaCare Plus is our next level up, designed for those who prefer comprehensive coverage. This includes everything in our Essential plan and also includes steering, heating, A/C, exhaust, and much more.



### Premium Coverage

CarvanaCare Premier is our highest level of coverage, providing mechanical and cosmetic repairs. This plan includes everything in our Essential and Plus plans and also includes **3 oil changes and tire rotations for 1 year**, minor cosmetic repairs, and tire/wheel damage.

## Components covered by CarvanaCare

Essential Basic Mechanical Coverage	Plus Comprehensive Coverage	Premier Premium Coverage
<div><div>Transmission/ Transfer Case</div><ul style="list-style-type: none"><li>Accumulator Pistons</li><li>Accumulator Rings</li><li>Accumulator Seal Bands</li><li>Bearings</li><li>Bell Housing</li><li>Bushings</li><li>Case</li><li>Chains</li><li>Check Balls</li><li>Cooler</li><li>Counter Shafts</li><li>Detent Cable</li><li>Drive Link</li><li>Drive Plate</li><li>Drums</li><li>Dust Cap</li><li>Flex Plate</li><li>Front Bands</li><li>Gaskets</li><li>Gears</li><li>Governor</li><li>Governor Support</li><li>Impeller Hub</li><li>Input Shaft</li><li>Input Turbine</li><li>Intermediate Bands</li><li>Internal 4x4 Actuator</li><li>Kickdown Bands</li><li>Kickdown Servo</li><li>Main Shaft</li><li>Manual Shaft</li><li>Modulator Valve</li><li>Multifunction Valves</li><li>Oil Pan</li><li>Oil Pump</li><li>Oil Pump Cover</li><li>Output Gears</li><li>Output Shaft</li><li>Output Shaft Bearings</li><li>Parking Lock Sprag</li><li>Parking Pawl</li><li>Pistons</li><li>Planetary Gear Carrier</li><li>Planetary Gears</li><li>Internal Pressure Sensors</li><li>Internal Speed Sensors</li><li>Reaction Gear Set</li><li>Rear Bands</li><li>Reverse Bands</li><li>Reverse Servo</li></ul></div> <div><div>Engine</div><ul style="list-style-type: none"><li>Balance Shafts</li><li>Balance Shaft Chains</li><li>Balance Shaft Sprockets</li><li>Cam Bearings</li><li>Cam Bolts</li><li>Cam Cover</li><li>Cam Follower</li><li>Camshafts</li><li>Camshaft Sprockets</li><li>Pistons</li><li>Planetary Gear Carrier</li><li>Planetary Gears</li><li>Internal Pressure Sensors</li><li>Internal Speed Sensors</li><li>Reaction Gear Set</li><li>Rear Bands</li><li>Reverse Bands</li><li>Reverse Servo</li></ul></div> <div><div>Ring Gears</div><ul style="list-style-type: none"><li>Roll Pins</li><li>Roller Clutches</li><li>Servo Rings</li><li>Shifts</li><li>Shift Cover</li><li>Shift Forks</li><li>Shift Valves</li><li>Side Cover</li><li>Snap Rings</li><li>Speedometer Drive Gear</li><li>Speedometer Driven Gear</li><li>Sprags</li><li>Springs</li><li>Sprocket Supports</li><li>Sprockets</li><li>Stator</li><li>Stator Shaft</li><li>Sun Gears</li><li>Synchronizer Hub</li><li>Synchronizer Rings</li><li>Synchromes</li><li>Internal Temperature Sensor</li><li>Thrust Washers</li><li>Throttle Valve</li><li>Torque Converter</li><li>Transaxle</li><li>Transaxle Case</li><li>Transmission Mounts</li><li>Turbine</li><li>Vacuum Modulator</li><li>Valve Body</li><li>Valve Solenoids</li></ul></div> <div><div>Cylinder Head Bolts</div><ul style="list-style-type: none"><li>Cylinder Heads</li><li>Engine Mounts</li><li>Exhaust Manifolds</li><li>Exhaust Valves</li><li>Flex Plate</li><li>Harmonic Balancer</li><li>Intake Manifold</li><li>Intake Valves</li><li>Intermediate Shaft Lifters</li><li>Main Bearing Caps</li><li>Main Bearings</li><li>Oil Pan</li><li>Oil Pressure Relief Spring</li><li>Oil Pump</li><li>Oil Pump Gears</li><li>Oil Pump Pickup</li><li>Oil Rings</li><li>Piston Rings</li><li>Pistons</li><li>Pushrods</li><li>Rocker Arm Studs</li><li>Rocker Arms</li><li>Rod Bearings</li><li>Silent Shaft</li><li>Supercharger</li><li>Tapsets</li><li>Thrust Pins</li><li>Timing Belt</li><li>Timing Belt Tensioner</li><li>Timing Gears</li><li>Timing Sprockets</li><li>Turbocharger</li><li>Valve Covers</li><li>Valve Keepers</li><li>Valve Lifters</li><li>Valve Seats</li><li>Valve Springs</li><li>Valve Stem Guides</li><li>Valve Stem Seals</li><li>Wrist Pins</li></ul></div> <div><div>Differential Cover</div><ul style="list-style-type: none"><li>Differential Housing</li><li>Drive Shaft</li><li>Half Shafts</li><li>Locking Hubs</li><li>Pinion Gear</li><li>Positraction Clutches</li><li>Ring Gears</li><li>Side Bearings</li><li>Side Gears</li><li>Slip Joints</li><li>Spider Gears</li><li>Universal Joints</li><li>Wheel Bearings</li><li>Yokes</li></ul></div> <div><div>Electric/Hybrid</div><ul style="list-style-type: none"><li>Drive Motor/Generator</li><li>High Voltage Battery</li><li>Inverter</li><li>On-Board Charger</li></ul></div>	<div><div>Transmission/Transfer Case</div><ul style="list-style-type: none"><li>Clutch Master Cylinder</li><li>Clutch Pilot Bearing</li><li>Clutch Slave Cylinder</li><li>Clutch Throw Out Bearing</li><li>Electronic Shift Control Unit</li><li>Flywheel</li><li>Pressure Plate</li><li>Range Sensor</li><li>Transmission Control Module (TCM)</li><li>Transmission Wiring Harness</li><li>Seals and Gaskets for Covered Components</li></ul></div> <div><div>Engine</div><ul style="list-style-type: none"><li>Engine Control Module (ECM)</li><li>Engine Oil Cooler</li><li>Engine Wiring Harness</li><li>Oil Filter Adaptor Housing</li><li>Variable Valve Timing Actuator</li><li>Variable Valve Timing Solenoid</li><li>Seals and Gaskets for Covered Components</li></ul></div> <div><div>Front/Rear Wheel Drive</div><ul style="list-style-type: none"><li>Center Support Bearing</li><li>CV Boots</li><li>Differential Covers</li><li>Locking Hubs</li><li>Wheel/Hub Bearings</li><li>Seals and Gaskets for Covered Components</li></ul></div> <div><div>Fuel and Emissions</div><ul style="list-style-type: none"><li>Evap Canister</li><li>Fuel Injector</li><li>Fuel Injection Pump</li><li>Fuel Level Sensor</li><li>Fuel Pump</li><li>Fuel Pressure Regulator</li><li>Fuel Rail Pressure Sensor</li><li>Fuel Tank Sending Unit</li><li>Intake Air Temperature Sensor</li><li>Leak Detection Pump</li></ul></div> <div><div>MAP Sensor</div><ul style="list-style-type: none"><li>Mass Air flow Sensor</li><li>Purge Valve/Solenoid</li><li>Throttle Body</li><li>Throttle Position Sensor</li><li>Electric Level Control</li><li>Solenoid Vent Valve</li><li>Seals and Gaskets for Covered Components</li></ul></div> <div><div>Heating and A/C</div><ul style="list-style-type: none"><li>A/C Compressor</li><li>Accumulator</li><li>Blower Motor</li><li>Blower Motor Resistor</li><li>Blower Motor Switch</li><li>Compressor Clutch</li><li>Consenser</li><li>Consenser Fan Motor</li><li>Coolant Heater Controller</li><li>Evaporator Core</li><li>Expansion Valve</li><li>Heater Core</li><li>HVAC Actuators</li><li>HVAC Control Unit</li><li>HVAC Control Head</li><li>Hybrid/Electric Coolant Heater</li><li>Interior/Exterior Temperature Sensor</li><li>Orifice Tube</li><li>Receiver/Dryer</li><li>Seals and Gaskets for Covered Components</li></ul></div> <div><div>Steering</div><ul style="list-style-type: none"><li>Electric Steering Motor</li><li>EVO Sensor</li><li>Power Steering Pump</li><li>Rack and Pinion Assembly</li><li>Steering Angle Sensor</li><li>Steering Gear</li><li>Steering Knuckles</li><li>Seals and Gaskets for Covered Components</li></ul></div> <div><div>Suspension</div><ul style="list-style-type: none"><li>Ball Joints</li><li>Control Arms</li><li>Control Arm Bushings</li><li>Control Arm Shafts</li><li>Electric Level Control Actuator</li><li>Electronic Level Control Compressor</li><li>Electronic Level Control Height Sensor</li><li>Electronic Level Control Module</li><li>Spindles</li><li>Stabilizer Bar</li><li>Stabilizer Bar Bushings</li><li>Torsion Bar</li><li>Torsion Bar Bushings</li><li>Torsion Bar Mounts</li><li>Track Bar</li><li>Track Bar Bushings</li><li>Wheel Bearings</li><li>Yaw Rate Sensor</li><li>Seals and Gaskets for Covered Components</li></ul></div> <div><div>Brake System</div><ul style="list-style-type: none"><li>ABS Accumulator</li><li>ABS Control Module</li><li>ABS Hydraulic Pump/Motor Assembly</li><li>ABS Wheel Speed Sensors</li><li>Brake Booster</li><li>Caliper(s)</li><li>Master Cylinder</li><li>Vacuum Pump</li><li>Wheel Cylinder</li><li>Seals and Gaskets for Covered Components</li></ul></div> <div><div>Cooling System</div><ul style="list-style-type: none"><li>Engine Cooling Fan Clutch</li><li>Engine Coolant Level Sensor</li><li>Engine Coolant Temperature Sensor</li><li>Thermostat</li><li>Turbo Charger Intercooler</li><li>Water Pump</li><li>Radiator</li><li>Cooling Fan Motor</li><li>Seals and Gaskets for Covered Components</li></ul></div> <div><div>Electrical</div><ul style="list-style-type: none"><li>HVAC Control Module</li><li>Accelerator Pedal Position Sensor</li><li>Air Bag Module</li><li>Air Bag Sensor</li><li>Alternator</li><li>Body Control Module (BCM)</li><li>Camshaft Sensor</li><li>Clock Spring</li><li>Convertible Top Motor</li><li>Convertible Top Switch</li><li>Crankshaft Sensor</li><li>Dash Light Dimmer Switch</li><li>Hazard Warning Switch</li><li>Instrument Cluster</li><li>Ignition Coil/Coil Pack</li><li>Ignition Module</li><li>Ignition Lock Cylinder</li><li>Impact Sensor</li><li>Keyless Entry Receiver</li><li>Keyless Entry Remote</li><li>Knock Sensor</li><li>Oil Level Sensor</li><li>Oil Pressure Sending Unit</li><li>Oxygen Sensor</li><li>Power Door Lock Actuators</li><li>Power Hatch Lift Motor</li><li>Power Mirror Motor</li><li>Power Seat Motors</li><li>Power Window Motors and Regulators</li><li>Powertrain Control Module (PCM)</li><li>Rear Hatch Motor</li><li>Rear View Camera</li><li>Sliding Door Motor</li><li>Starter Motor</li><li>Tire Pressure Sensors</li><li>Window Washer Pump</li><li>Window Wiper Motor</li><li>Wiring Harness</li></ul></div> <div><div>Electric/Hybrid</div><ul style="list-style-type: none"><li>AC Charger</li><li>Battery Current Sensor</li><li>Battery Pack</li><li>Battery Temp Sensor</li><li>DC-DC Converter</li><li>Inverter</li><li>Vehicle Control Unit (VCU)</li></ul></div> <div><div>Tire, Wheel &amp; Dent</div><ul style="list-style-type: none"><li>Dent and ding protection</li><li>Tire repair due to damage from road hazard</li><li>Tire replacement due to damage from road hazard</li><li>Wheel repair due to damage from road hazard</li><li>Wheel replacement due to damage from road hazard</li><li>Cosmetic wheel repair</li></ul></div> <div><div>Complimentary Maintenance</div><ul style="list-style-type: none"><li>Change engine oil</li><li>Change engine oil filter</li><li>Lubricate front suspension</li><li>Lubricate steering linkage</li><li>Lubricate ball joints</li><li>Multipoint inspection</li><li>Rotate tires</li></ul></div> <div><div>Important, please read:</div><p>Every effort has been made to provide a complete list of covered components. Exclusions and limitations apply, refer to your contract terms and conditions for details and limitations.</p><p>In Florida, CarvanaCare is provided by SilverRock Automotive of Florida, Inc., P.O. Box 29087, Phoenix, AZ 85038-9087, Florida License #30847</p></div>	

Included in every plan  
**ROADSIDE ASSISTANCE**



Towing



Jump Start



Flat Tire Assistance



Locksmith Assistance



Emergency Gas/Fluids



CARVANA